

Recommended maintenance for your vehicle

2000 Ford F-250

Driving Condition:	Normal Condition
Fuel:	Diesel

Mileage	15k	30k	45k	60k	75k	90k	100k	105k	120k	135k	150k
Inspect engine cooling system and hoses	Y	Y	Y	Y	Y	Y		Y	Y	Y	r
Inspect brake pads/shoes/rotors/drums, brake lines and hoses, and parking brake system	r	~	r	~	~	r		~	~	r	~
Check and lubricate clutch release lever	Y		Y		Y			Y		Y	
Add 8 to 10 oz of VC-8 coolant additive to green engine coolant		~	r	~	~	۲		~	~	۲	
Replace fuel filter	Y	Y	Y	Y	Y	Y		Y	Y	Y	Y
Inspect wheel ends for end play and noise	Y	Y	Y	Y	Y	Y		Y	Y	Y	Y
Inspect and lubricate steering linkage, ball joints, suspension and, if equipped, half shafts drive shaft and u-joints	۲	٢	۲	r	۲	r		۲	۲	r	۲
Replace engine air filter		Y		Y		Y			Y		r
Inspect complete exhaust system and heat shields		r		~		~			~		r
Change automatic transmission fluid		Y		Y		Y			Y		
Change green engine coolant			Y		Y			Y		Y	
Change manual transmission fluid				Y					Y		
Lubricate 4x4 front hub needle bearings				Y					Y		
Lubricate 4x2 front wheel bearings, replace grease seals, and adjust bearings				r					r		
Inspect accessory drive belt(s)							×				
Change front axle lubricant											r
Change transfer case fluid											Y
Change automatic transmission/transaxle fluid and filter											r
Replace front 4x2 wheel bearings and grease seals, lubricate and adjust bearings											r
Replace accessory drive belts (if not replaced within last 100,000 miles)											



EVERY Check engine air filter restriction gauge, replace filter as required

Perform multi-point inspection

Rotate tires for optimal tire life
Change anging all and replace all fill

Stange engine oil and replace oil filter